

INTRODUCTION

Soyntec® thanks you for buying Soyntec® Wireless Keyboard & Mouse Inpput Combo™ 450 Series. We wish you enjoy using it.

Inpput Combo™ 450 keyboard & mouse with long distance wireless technology, offer you an ergonomic design and attractive colors with rubber finishing surfaces for a precise and comfortable operation. Include additional buttons for advanced users.

We recommended reading this user manual in order to enjoy the product in a safe way and with the best features.

CARE AND MAINTENANCE


- Do not expose your Inpput Combo™ 450 Series to shakes, dust, direct sun light, moisture or extreme temperatures.
- Do not use abrasive or corrosive cleaners.
- Keep the device clean and without dust with a soft and dry cloth.
- Use the power cable of your Inpput Combo™ 450 Series in order to connect the device at the grid circuit.
- Do not disassemble the device. Any repair work must be performed by qualified Energy Sistem Soyntec's personnel.
- Keep distance to water or moisture that may be harmful to the product.

MAIN FEATURES

- USB cable connector.
- Sensor report rate on mouse: 3000 times per second.
- Operation angle: 360°.
- Operation distance: Up to 10 m.
- Receiver power requirement: 5V DC from USB port.
- Frequency: 2,4 GHz (2,402-2,472 MHz).
- RF modulation: FSK (Frequency Shift Keying).
- RF bandwidth: 541,667 KHz.
- RF output power: 1-2 mW.
- Mouse resolution: 800 DPI.
- Sensor Tracking Speed: 16 inches/second.
- Mouse battery type: 2 AA alkaline.
- Keyboard battery type: 2 AAA alkaline.

PRODUCT CONTENT

- Wireless keyboard.
- Wireless mouse.
- Receiver.
- CD with drivers.
- User manual.
- 2 x AAA batteries.
- 2 x AA batteries.

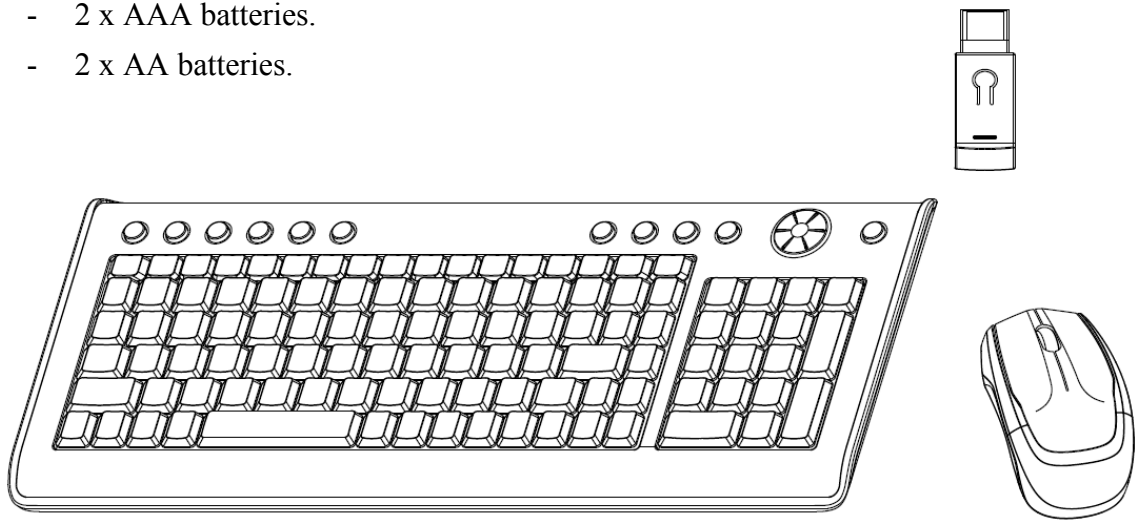


BATTERY INSTALLATION


Wireless keyboard use two AA alkaline batteries and mouse use two AAA Alkaline batteries.

To install the batteries in the Mouse, please follow these steps:

- Step 1. Open the battery compartment.
- Step 2. Insert the batteries caring on the polarity. For this, follow the figure instructions.
- Step 3. Replace the cover.

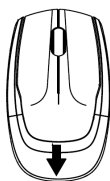

Step 1.

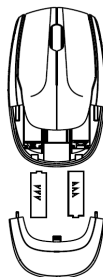


Step 2.



Step 3.

To install the batteries in the keyboard, please follow the follow these steps:

- Step 1. Open the battery compartment.
- Step 2. Insert the batteries caring on the polarity. For this, follow the figure instructions.
- Step 3. Replace the cover.

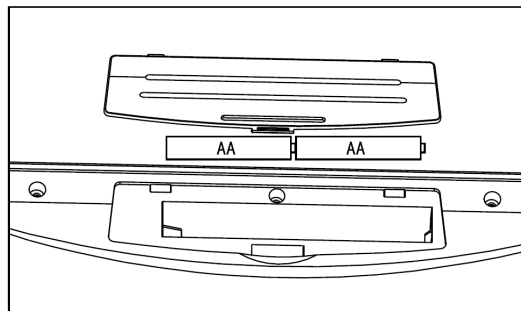

MICE AND KEYBOARD INSTALLATION



If you have installed another keyboard driver on your computer, please uninstall it before proceed. Windows 98 or higher is necessary for the correct product installation.


Please note that in order to install the webcam you need a free USB connector in your computer.

Follow these steps to install the webcam:

1. Insert the provided drivers CD and select “Install Windows 98 Driver” or “Install Windows NT Driver” depending on your operative sistem.
2. Click the “Next” button until start the driver installation.
3. Click “Finish” to close the installation wizard.
4. Connect the receiver to a free USB connector. The operating system will detect it and it will be ready to pair the keyboard and mouse.



USB port

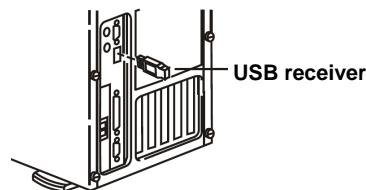




PAIR DEVICES &/OR CHANGE THE SECURITY ID

Your RF mouse and keyboard come with 1 channel and multi-security ID, which can let your mini receiver listen to one mouse or keyboard.

If this happen, follow the 1), 2) & 3) steps to pair the devices.
Also is necessary to do that when batteries are replaced.


To pair wireless keyboard and mouse with receiver follow these steps:

- 1) Press the connect button on the front side of receiver.
- 2) Press the connect button on the the bottom side of keyboard.
- 3) Press the connect button on the bottom side of mouse.

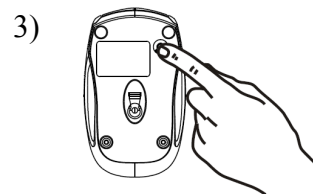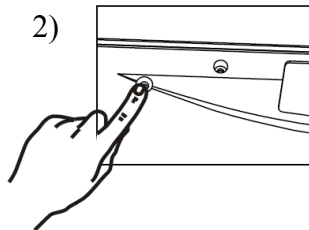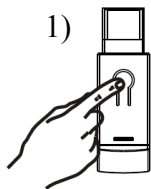

SOFTWARE

When install the software in computer, will appear both mouse and keyboard icons in the taskbar (by default, down and right side of Windows screen).

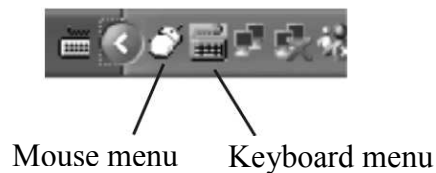


Keyboard menu:

When open the keyboard icon, will appear the following menu:



With this menu, you can configure the action of each keyboard hotkey.

By opening each keyboard hotkey from the menu, will appear the following Window:

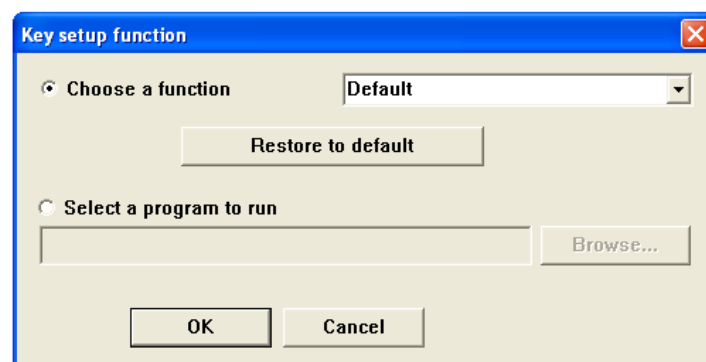

Here you can select between the following options:


- Default function → Choose a function → Default.
By this way the program by defect will be opened.

- Or you can choose any program to be open → Select a program to run.
In this case we have to select the program to assign to the hotkey, by opening the browser.

After finish any of these actions, just accept clicking the OK button.





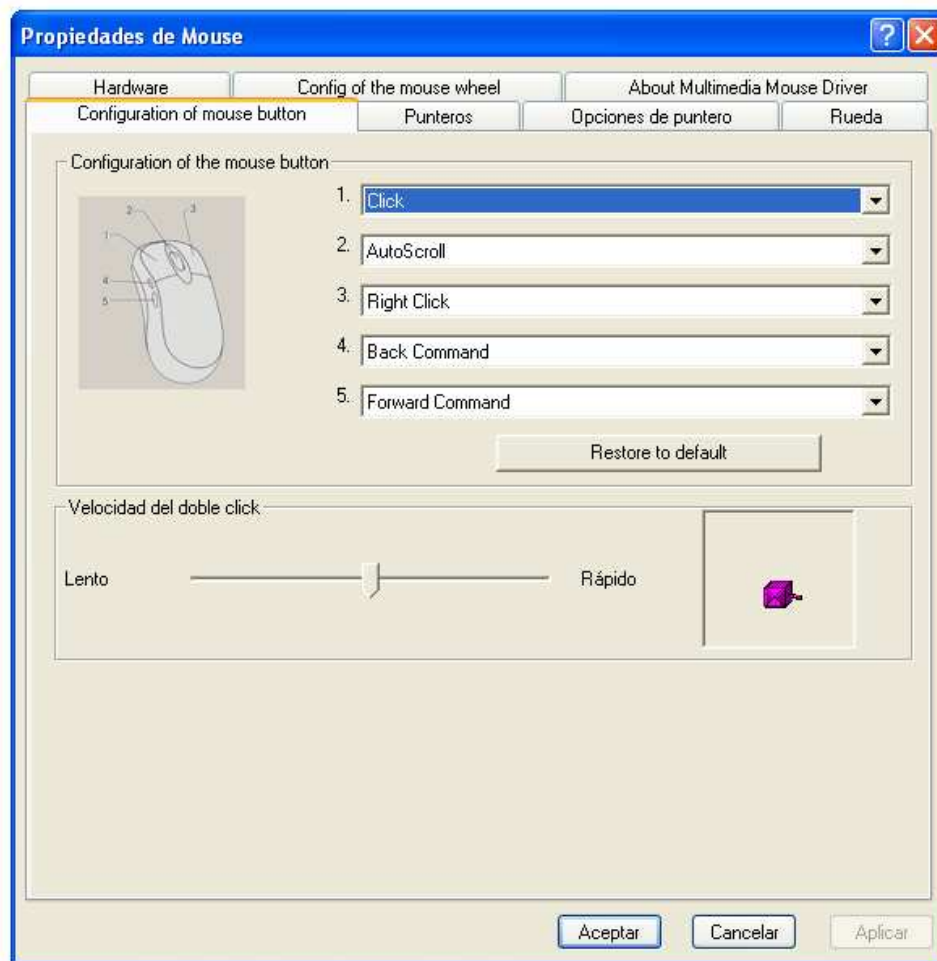








Mouse menu:

When open the mouse icon, will appear the following menu:



Here you can configure the Mouse properties with retail, just by selecting the different options available.

HOTKEYS ON THE KEYBOARD

-  Web home
-  My favorite
-  E-mail.
-  Media
-  Play/Pause
-  Pre-track
-  Next-track
-  Volume up
-  Volume down
-  Mute*
-  My computer
-  Calculator
-  Sleep*

* These are not programmable buttons.

WARRANTY

Energy Sistem Soyntec S.A. warrants its products to be free from defects in materials and workmanship at the time of purchase.

The warranty period is 36 months from the date of purchase for Speakers.

WARRANTY PROCEDURE

- 1) Visit the Support section at <http://support.soyntec.com> and select your product to view the FAQ (Frequently Asked Questions). The solution to your problem is very likely to have been already published there. You will also be able to download user manuals, user guides, drivers and updates.
- 2) If you cannot find an appropriate solution in the Support section, you may send us your enquiry or warranty service request by email: support@soyntec.co.uk.
- 3) Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.



AGREEMENT DECLARATION

Supplier Name: Energy Sistem Soyntec S. A.

Address: Pol. Ind. Finestrat C/ Calpe Esq. C/ Alicante S/N, 03509 Finestrat Alicante - SPAIN

Tel: 902 388 388 **Fax:** 902 119 034 **NIF:** A53107488

We declare under our own exclusive responsibility the product agreement:
Soyntec® Wireless Keyboard & Mouse Inpput Combo™ 450 SERIES

Manufacturing country: China

Which concern this agreement, with the norm(s) or other(s) formative(s) document(s).

Certificate CE SEM07123479, Date 31st December 2007

In accord with the disposition of the Directive 93/68/CEE, from the European Parliament and the Counsel from 22nd July 1993, transposed to the Spanish legislation through the Real Decree 1950/1995, from 1st December 1995.